


CUTTING INSTRUCTIONS

Cut the stock tubes between front silencer and catalytic converter.

 **Cutting point = 360mm, measured from front silencer weld!**

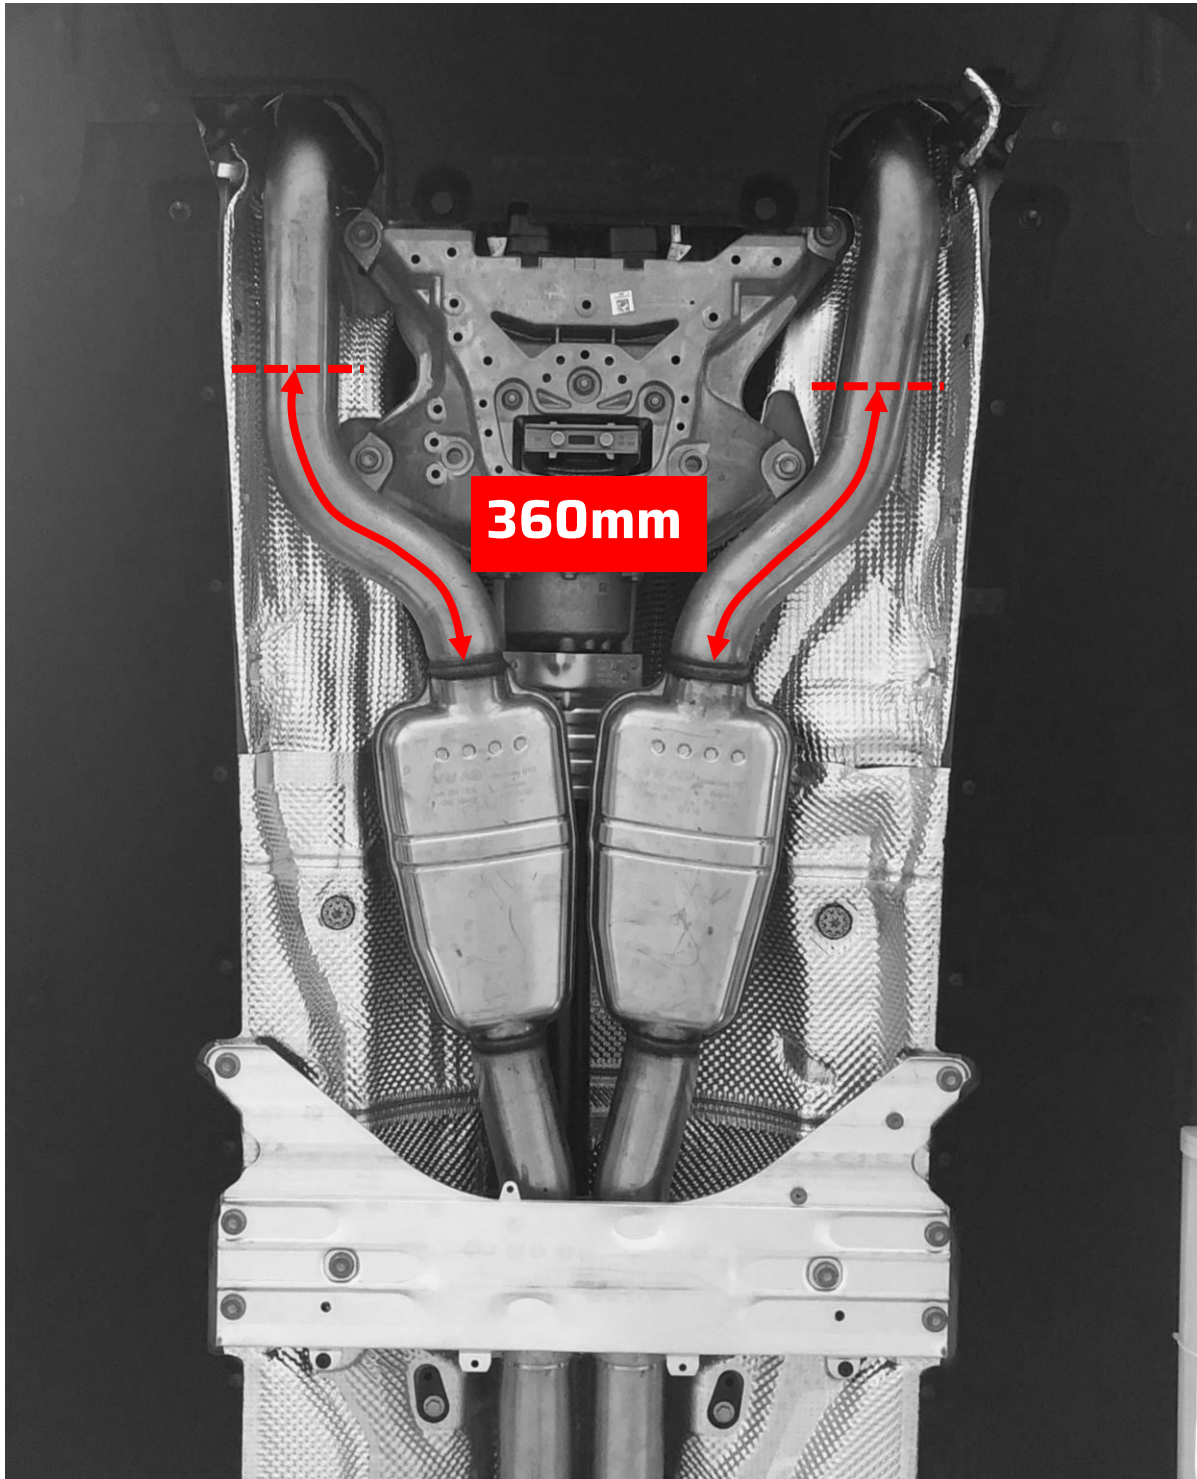

Mount the REMUS front silencer replacement tubes onto the stock pipes.